

iLuv[®]



English

**Jumbo LED Display
Dual Alarm Clock
with Wireless
Bed Shaker**



TimeShaker[®] BOOM

 
User Manual (Ver 1.1)




WHAT'S INCLUDED




Main Unit

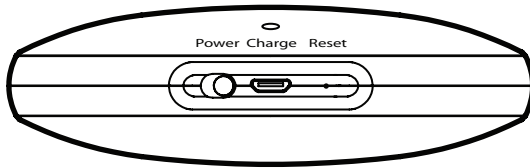

Wireless Shaker

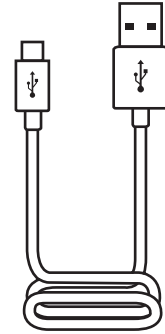 

 Micro USB Cable
For charging only. Does not sync.

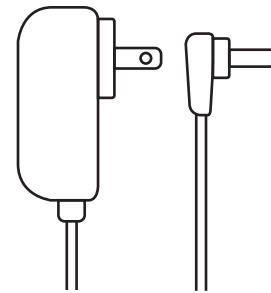


Power Adaptor

PRODUCT OVERVIEW

Top

 1. SNOOZE/DIMMER
2. ALARM SETUP/STOP
3. TIME SETUP
4. TIME/ALARM INCREASE
5. TIME/ALARM DECREASE

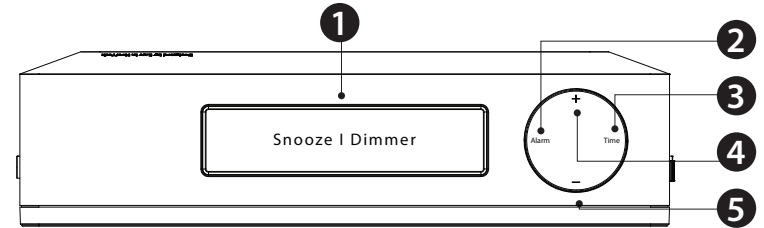


Front

6. DISPLAY
7. PM INDICATOR
8. ALARM 1 INDICATOR
9. ALARM 2 INDICATOR
10. LOW BATTERY INDICATOR



Back

 16. ALERT LIGHT ON/OFF
17. 12/24 TIME FORMAT
18. DAYLIGHT SAVING TIME
19. DC POWER INPUT JACK

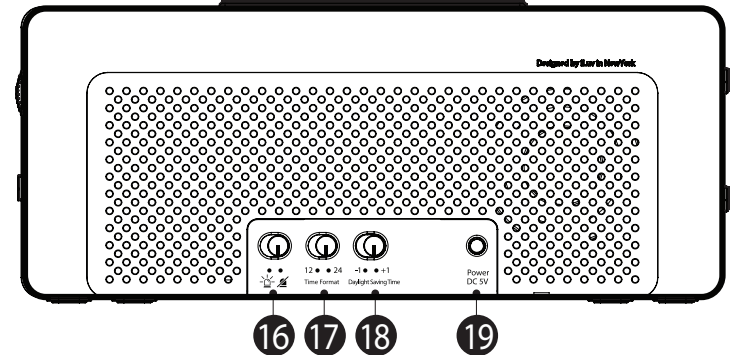

Left

11. ALARM ON/OFF & SET: ALARM1+2,
ALARM 1/SET, ALARM 2/SET

 
12. WAKE TO:
PANIC SOUND+VIBRATION,
VIBRATION, PANIC SOUND

Right

13. PANIC SOUND VOLUME CONTROL

14. VIBRATION STRENGTH: EARTHQUAKE,
STRONG, NORMAL, OFF


15. USB CHARGING PORT

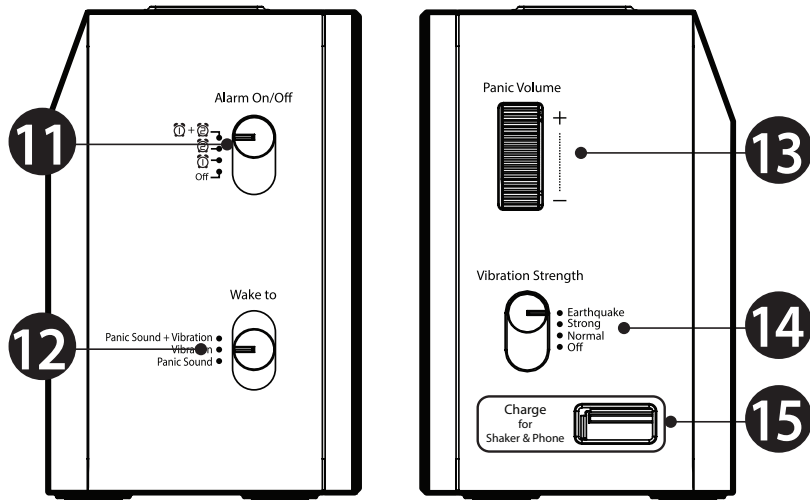

Bottom


21. BACK-UP BATTERY
COMPARTMENT

 21. WIRELESS SHAKER

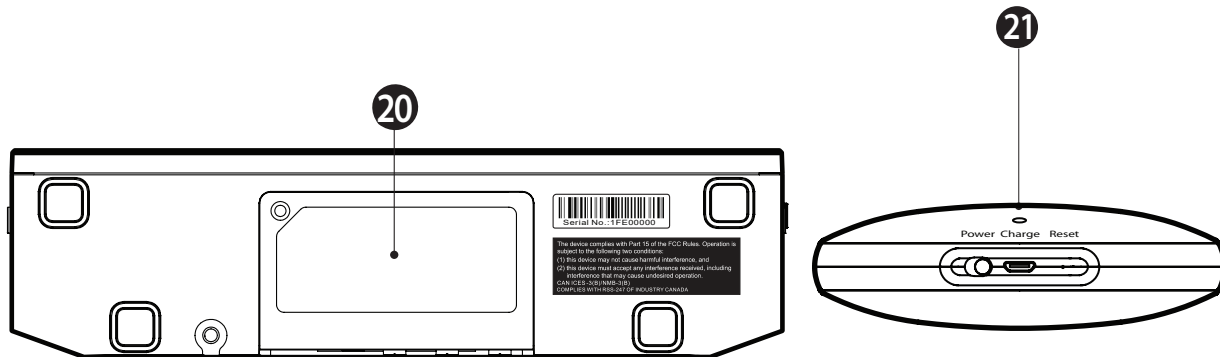

Connecting to Power

 Connect the included power adaptor to the **19** Power Port located on the back of the unit and connect the wall plug to a working wall outlet

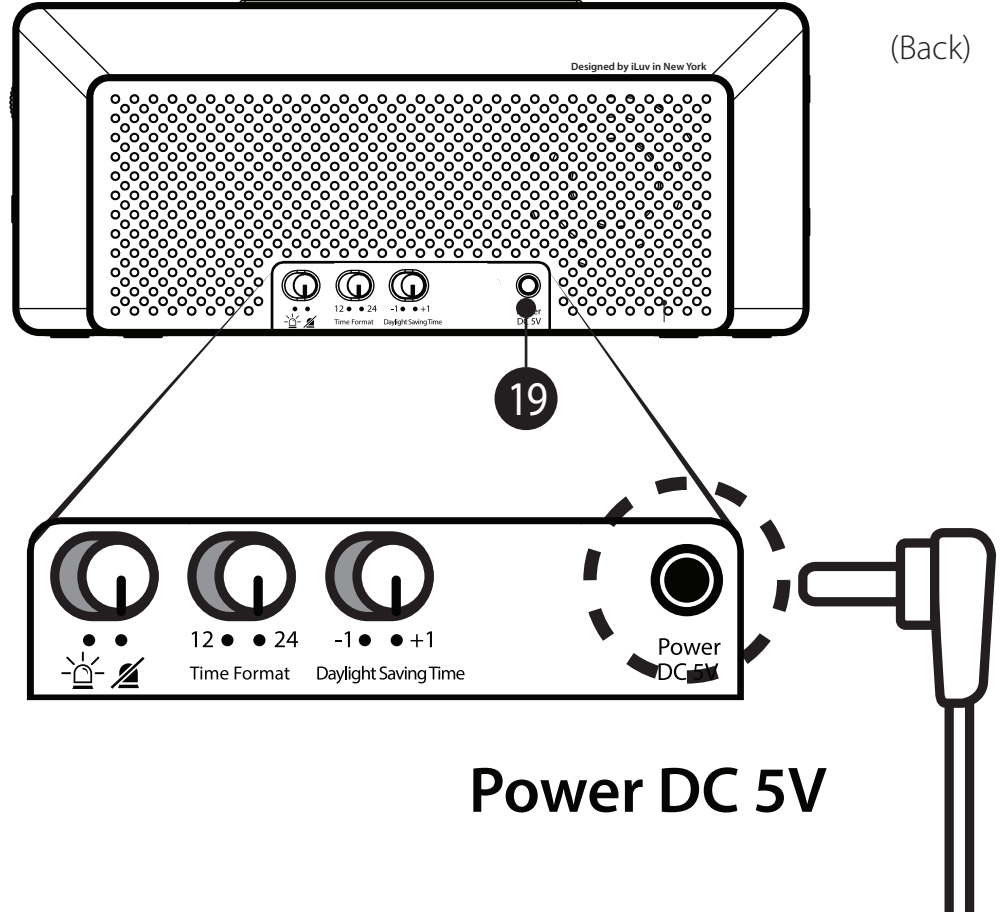


Power DC 5V


Default Time is set at 12:00PM

(Top)

 
1. Press and HOLD the **3** Time Button for 3 Seconds or until the clock Display begins blinking.

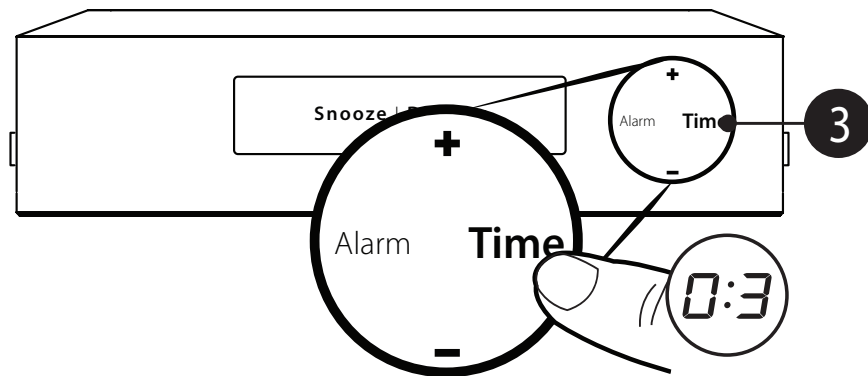

 2. Press the **4** "+" or **5** "-" to adjust the time accordingly. Press and HOLD down the buttons for faster scrolling.

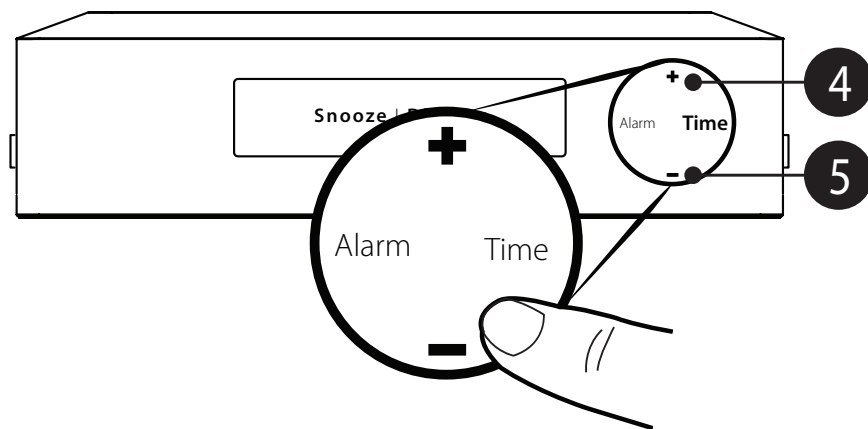

 
3. When finished, press the **3** Time Button to confirm and exit from **Time Set-up Mode**.

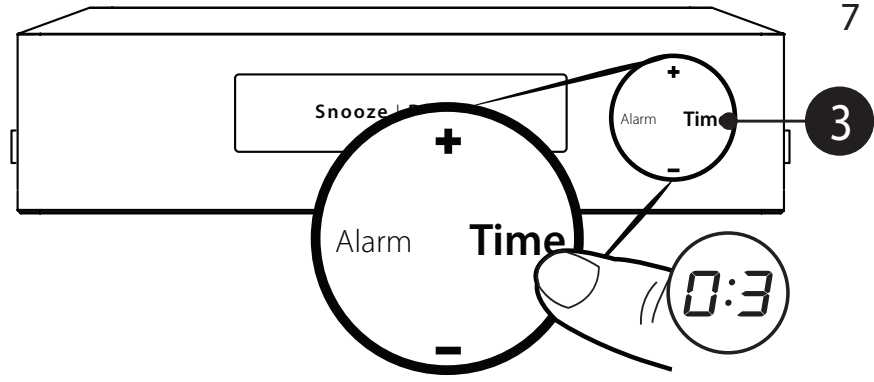

(Back)

Select Time Format (12/24 hr)

 • To select your preferred time format, use the **17** "Time Format" switch located on the back of the device and flip the switch to 12hr or 24hr time format.

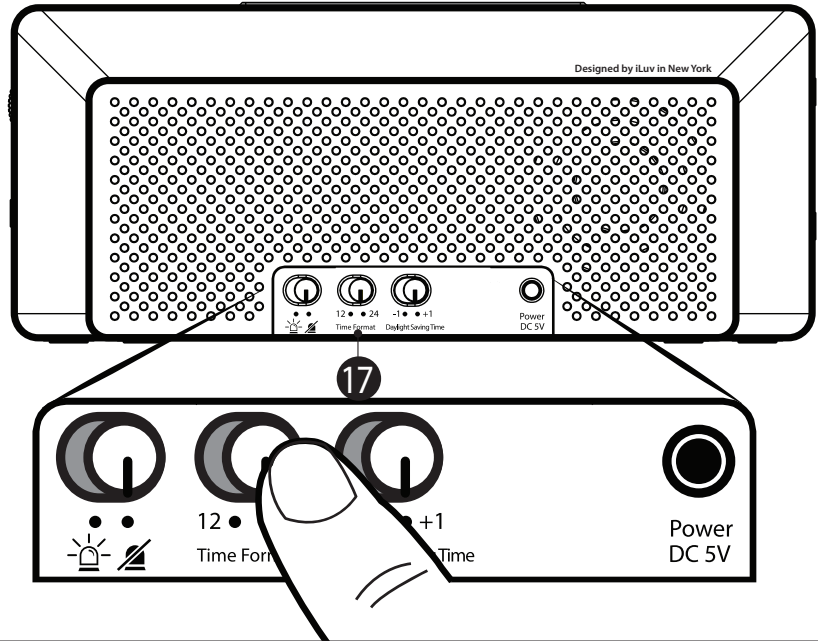



• When using the 12hr time format, the PM light will appear when you are entering PM time. The indicator will not appear during the 24hr format.



Daylight Saving Mode*

To adjust your clock's time -1/+1 hr VIA DST, use the **18** "Daylight Savings Time" switch located on the back of the device to adjust accordingly.

  *Only applicable for areas that observe DST

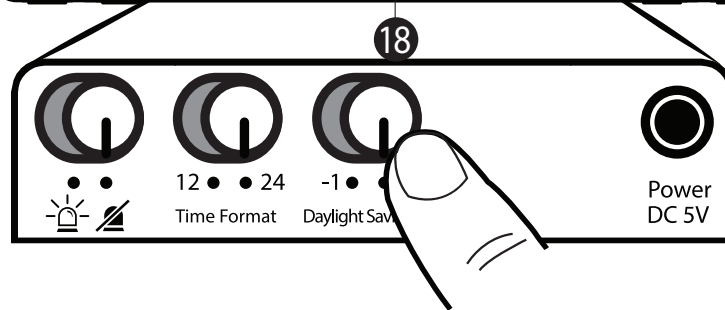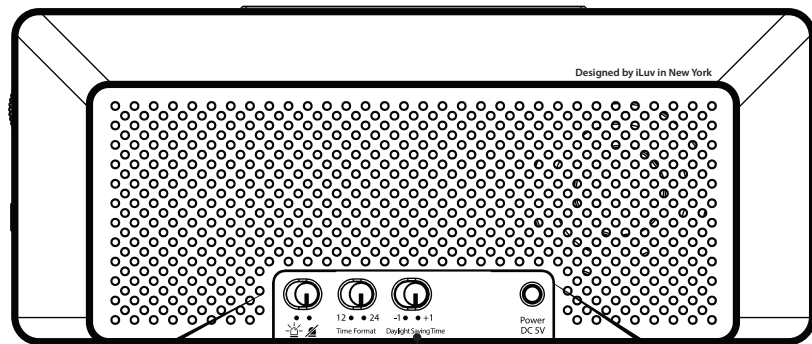

(Back)

ALARM SET UP

The device is equipped with 2 separate alarm clocks and will need to be set individually. Ensure your alarms are engaged by checking the placement of the switch control after alarm setup is done. (see images)

 
(Left)

Alarm setup will only work with AL1  or AL2 


❖ **Setup is not available on the placement of AL1+AL2  +  or OFF the switch control**

Entering ALARM 1  SET-UP Mode

1. Adjust the  side switch to Alarm 1 

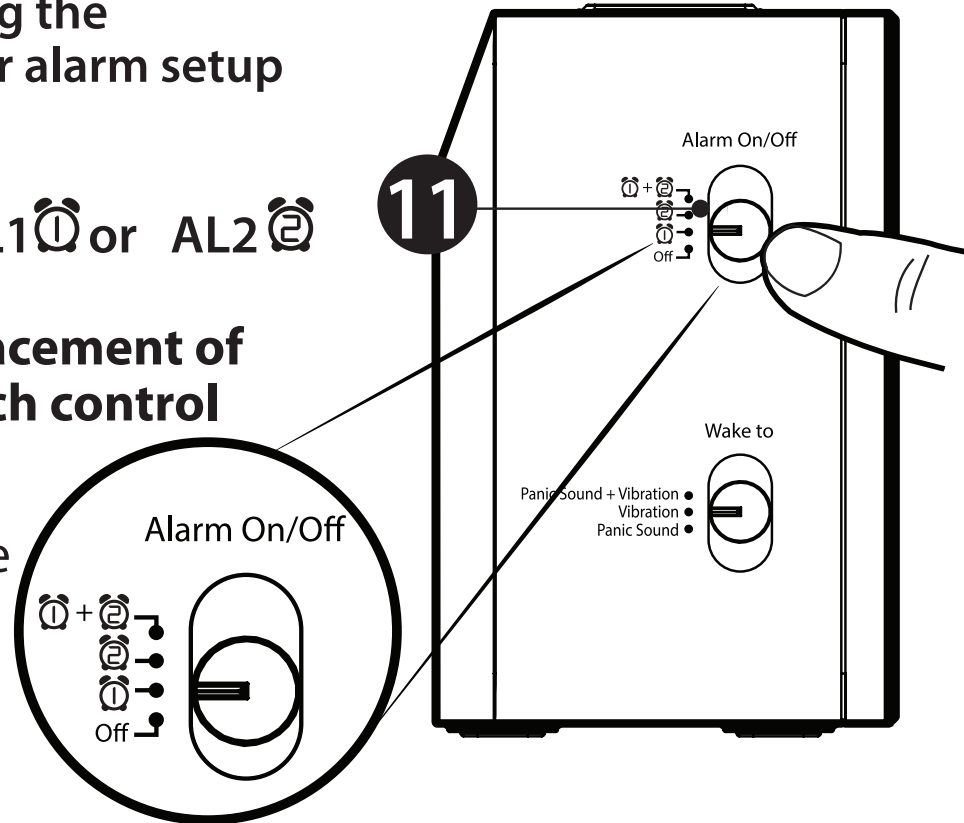

 2. Press and HOLD the **2** Alarm button to enter set-up mode.

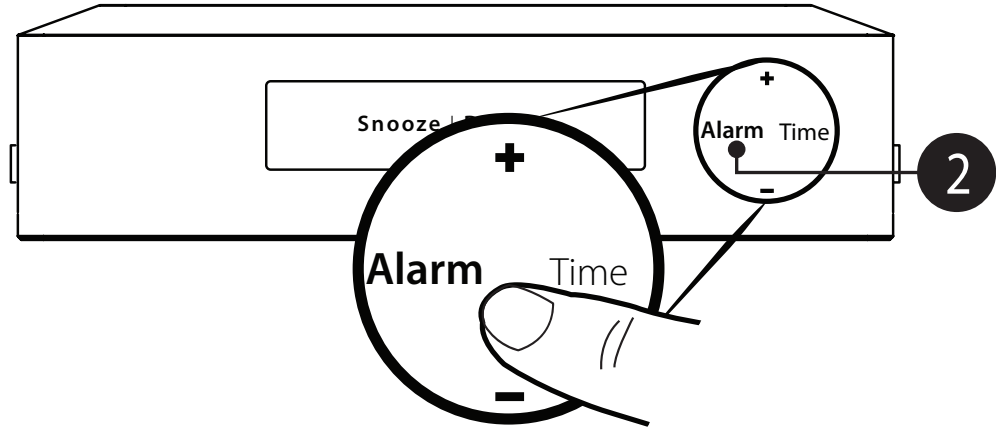


3. The LED display will blink if done correctly.




4. Press the **4** "+" or **5** "-" button to adjust the time.

 For faster adjustment, press and HOLD the **4** "+" or **5** "-" button.

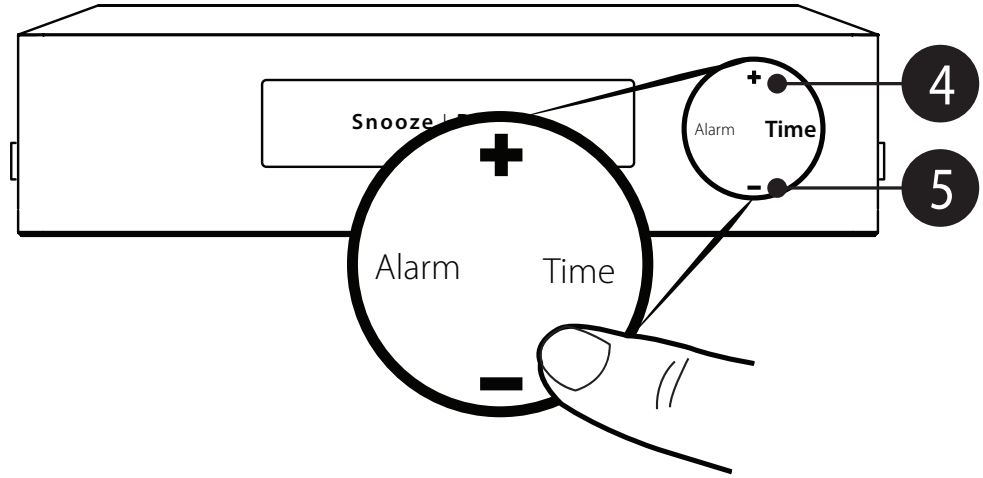

 
5. When the desired time is set, press the **2** Alarm button to complete the alarm set-up.

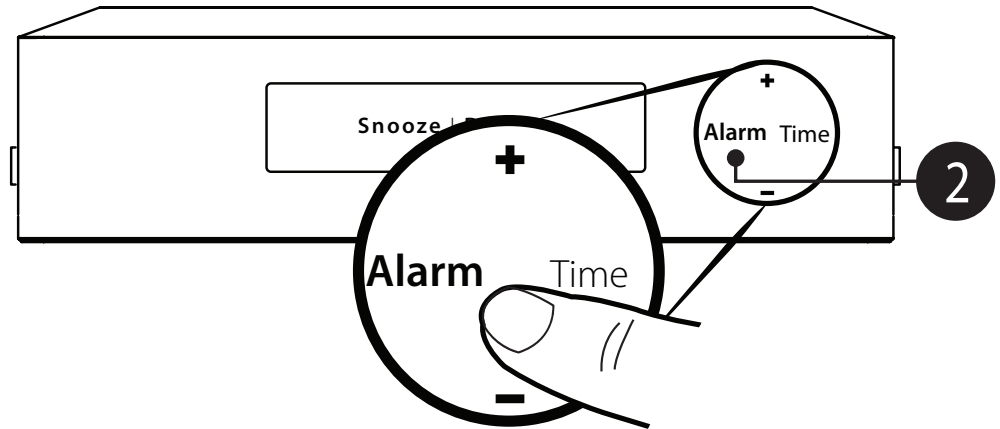

Entering ALARM 2 SET-UP Mode

1. Adjust the **11** side switch to Alarm 2 

 Then repeat steps Alarm 1  Set Up steps 2 -5 for Alarm 2 

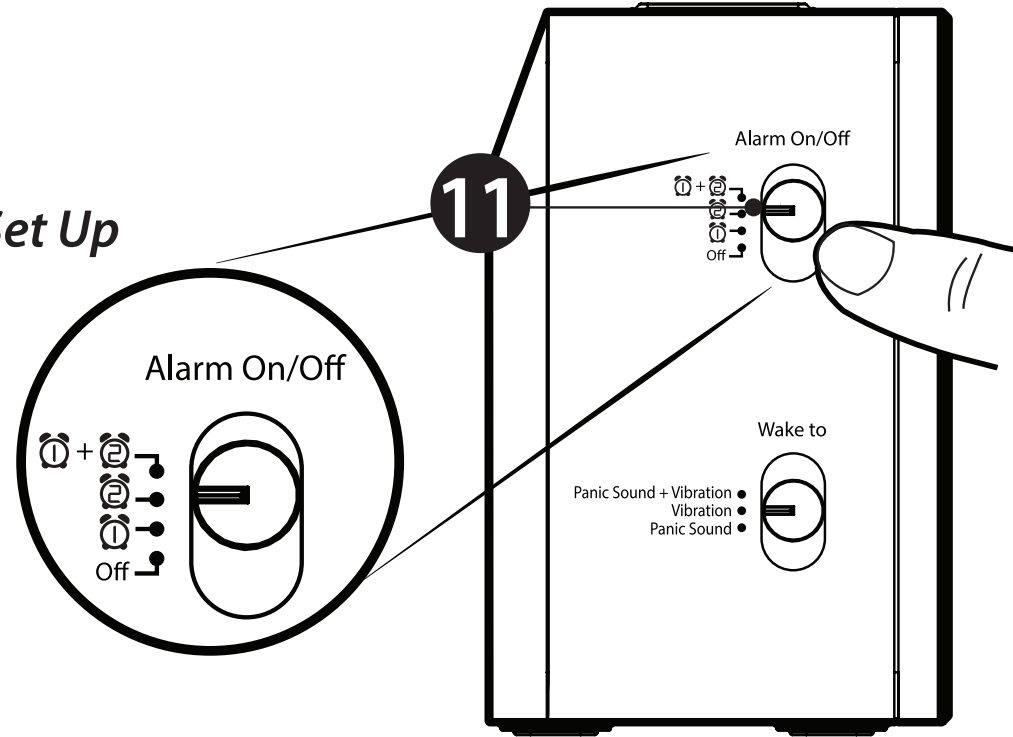


Setting up the *Alarm Source*

The alarm source selected will activate with the alarm(s).

You can change the alarm alert source by using the **12** switch controls located on the left side of the device.


- Panic Sound + Vibration
- Vibration
- Panic Sound

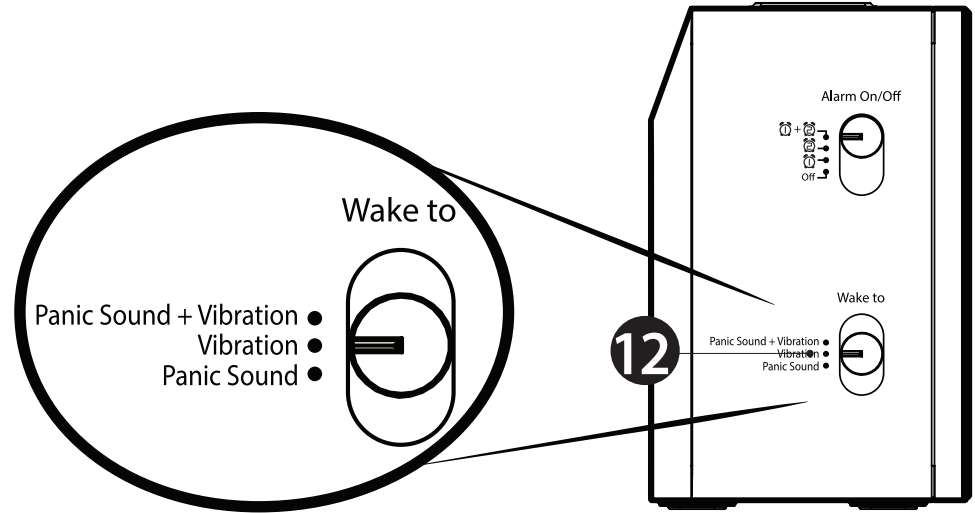

Setting up *Shaker Alarm*


To include the Wireless Shaker into your alarm routine, follow these steps:

1. Slide the power switch to "ON" by using the switch located on the shaker

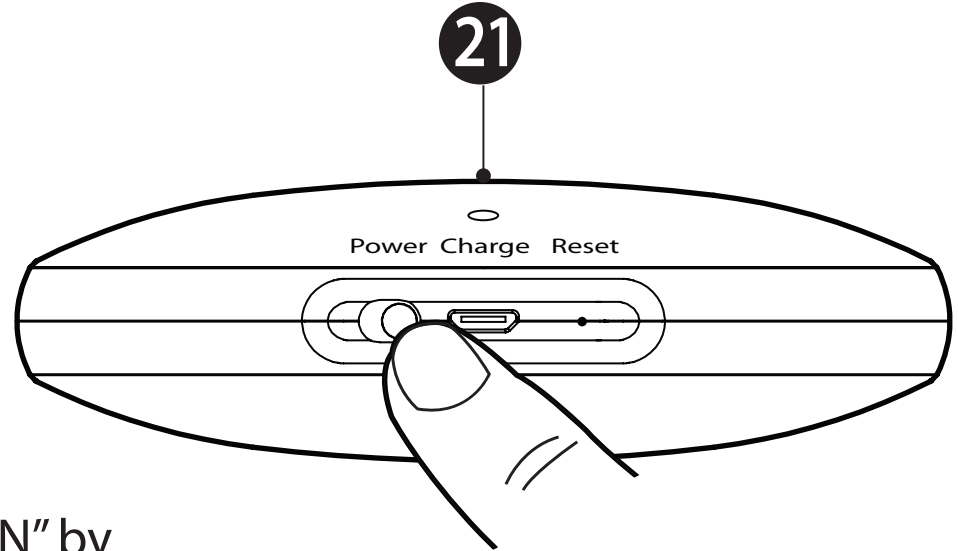

2. The Wireless shaker alarm will activate ONLY on **12** Vibration or Panic Sound + Vibration Alarm settings.


- Panic Sound + Vibration
- Vibration
- Panic Sound (X)

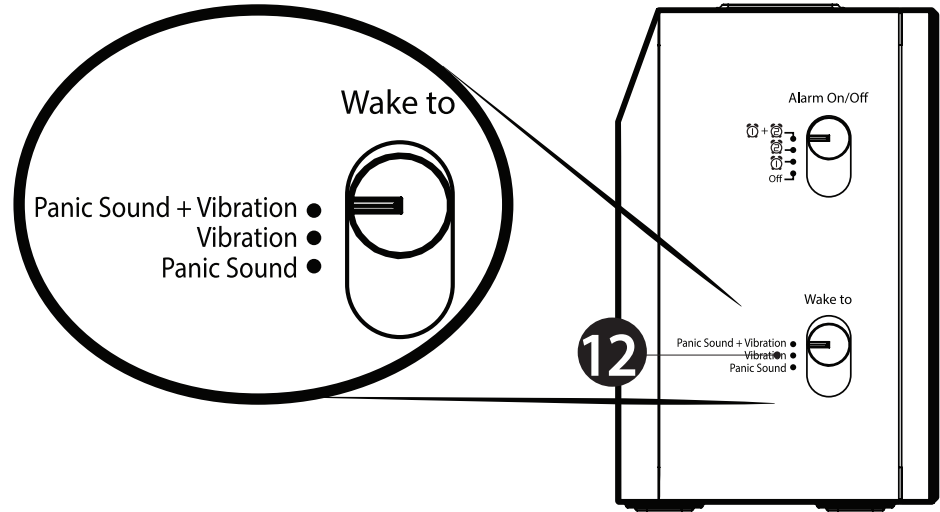

3. Vibration Strength

Setting: Choose the strength level of vibration by using the **14** switch located on the right side of the device.

- Earthquake
- Strong
- Normal
- OFF (X)


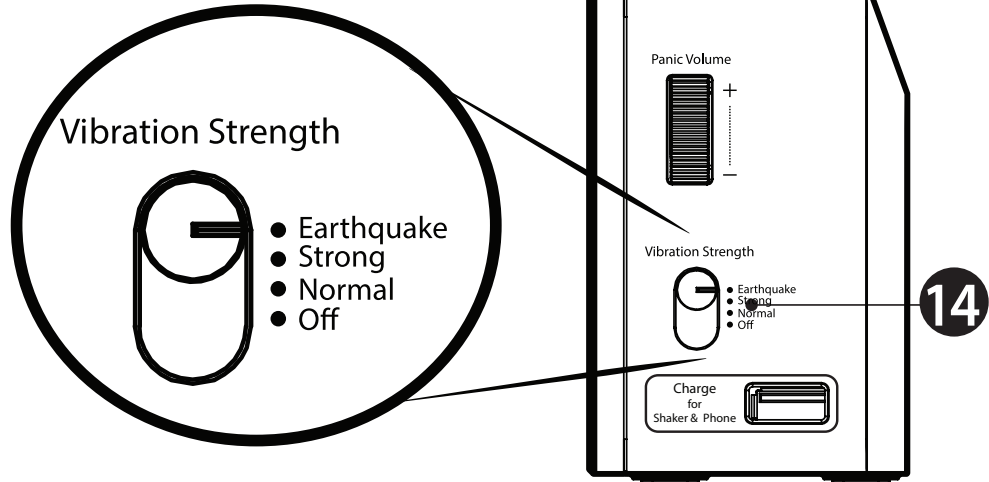


Setting up Alarm Light

You can also add on the **16** Alarm Light to your scheduled alarm by using the switch controls located on the back of the device.

Alarm Light will work with all three alarm sources.

- Panic Sound + Vibration
- Vibration
- Panic Sound

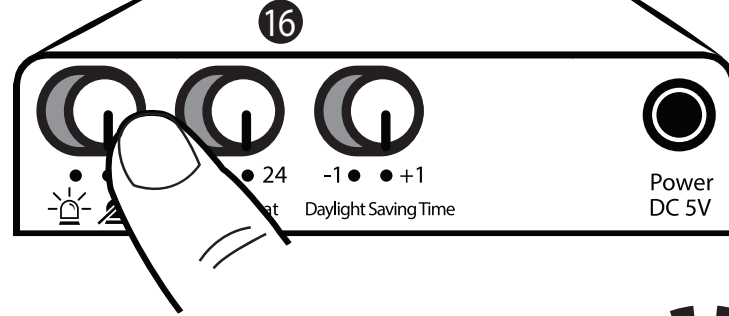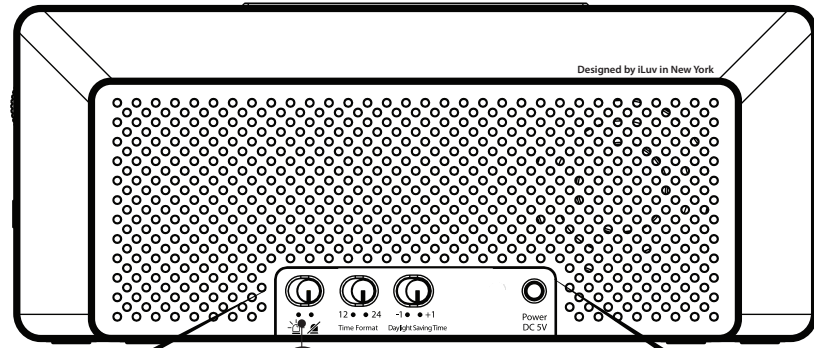


(Front)

Setting up *Panic Volume*

Adjust the volume of the **13** Panic Alarm Sound by using the volume control located on the right side of the device.

Panic Alarm sound *will not* work with Vibration alarm source.

- Panic Sound + Vibration
- Vibration(X)
- Panic Sound

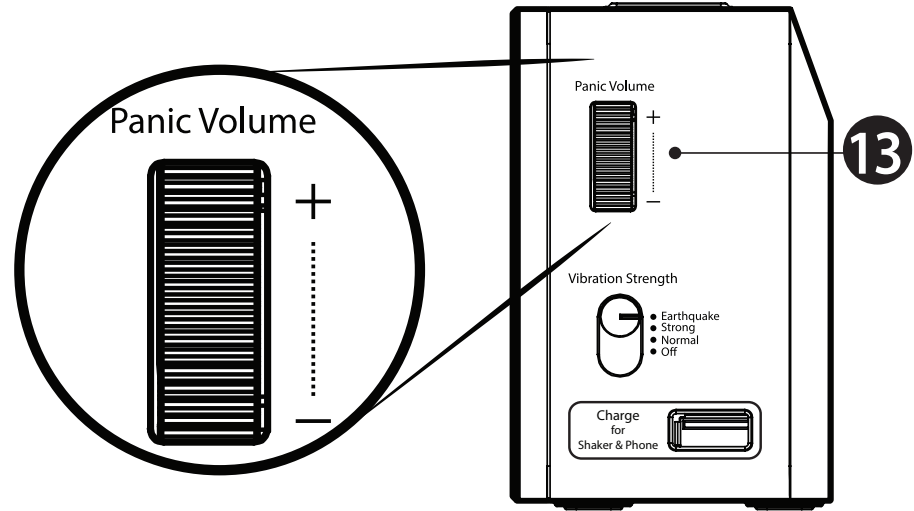


ENABLE/DISABLE ALARM

Please remember to activate/de-activate your alarm accordingly. If your turn off the alarm, you must enable it again for the alarm system to be activated.


To activate/de-activate your alarm, use the **11** switch controls located on the left side of the device

Switch setting

- Activate - AL1 or AL2, AL1+AL2 for dual alarm
- Deactivate - OFF

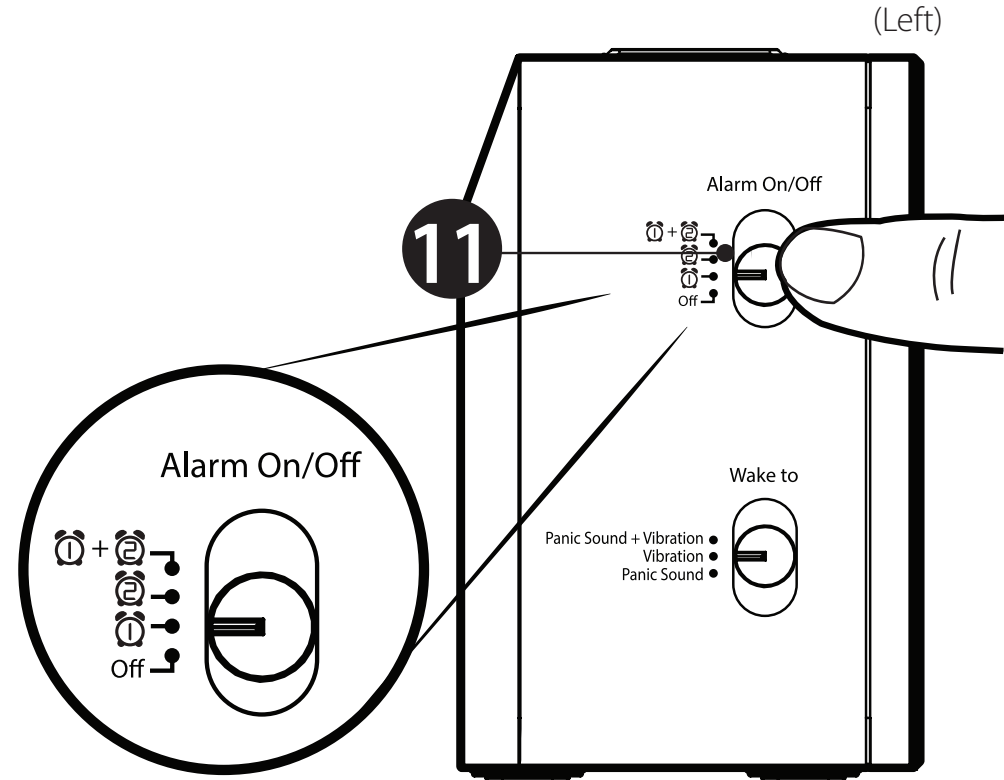


- When the alarm is activated, the following options are available
- **Snoozing your alarm:** Press the **1** “SNOOZE” button located on the top of the device temporarily snooze your alarm. The snooze will silence your alarm in increments of 9 minutes.

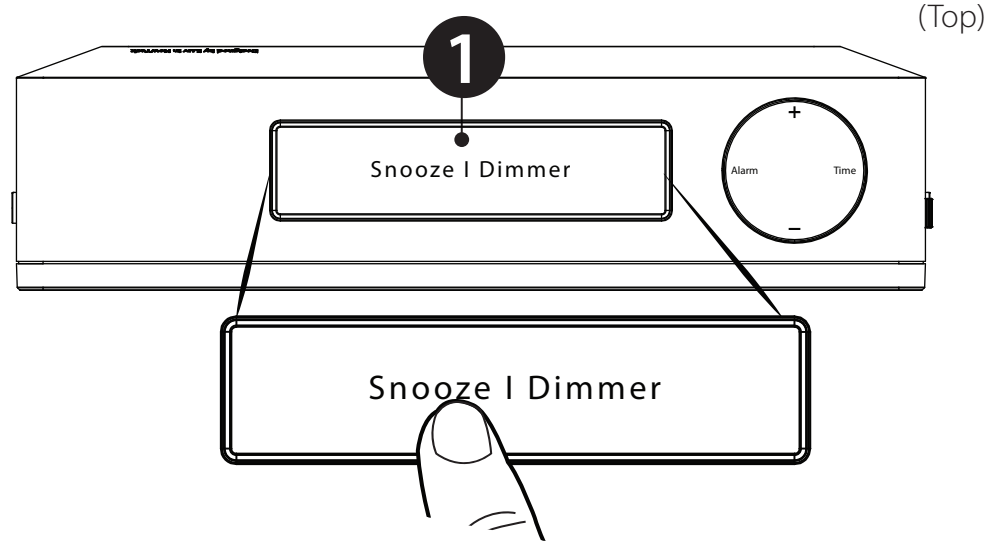

After 60 minutes, the snooze function will no longer be available and the alarm will shut off completely until the next scheduled alarm.

TURNING OFF THE ALARM

- **Stopping your alarm:** To stop the alarm until the next scheduled time, press the **2** “Alarm” button located on the top of the device.

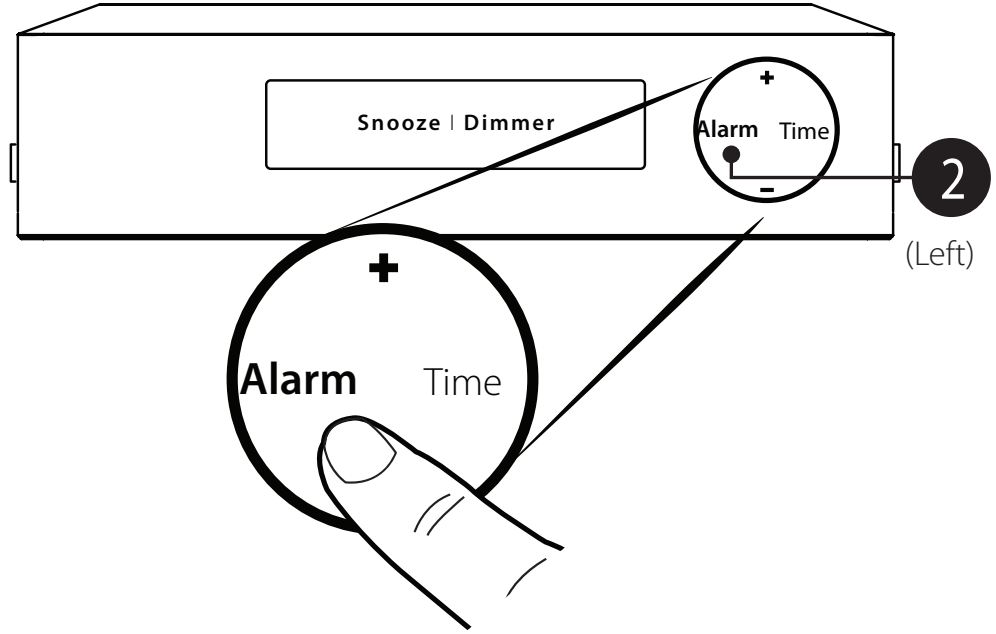


- The TimeShaker BOOM is equipped with a display dimmer. You can select the brightness level by pressing the **1** SNOOZE/DIMMER button during stand-by mode.

5 level brightness setting

(OFF > 100% > 75% > 50% > 25% > OFF)

- Display dimmer will NOT work while the alarm is active.

(Top)

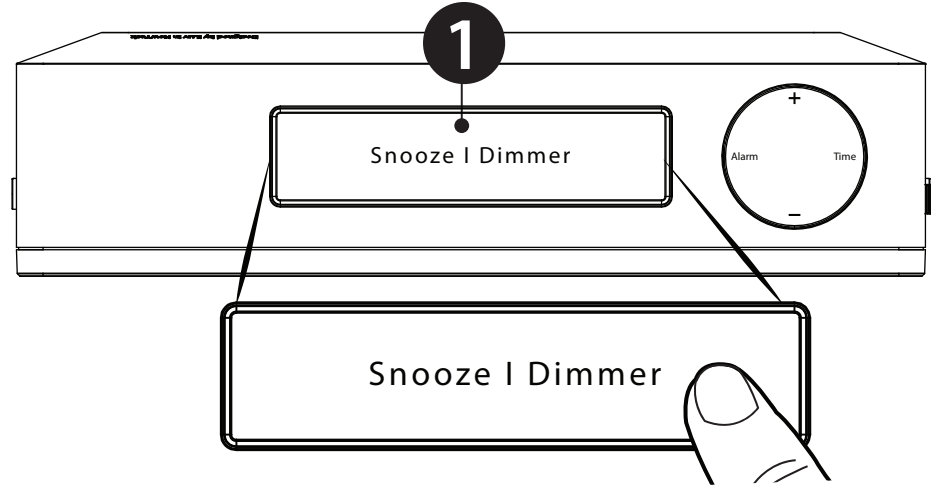


CHARGING WIRELESS SHAKER

- **LED indicator** on the wireless shaker.


Refer to the light status indicators below:

1. **Flashing red LED:** Battery low
2. **Solid red LED:** Charging
3. **LED off:** Fully charged

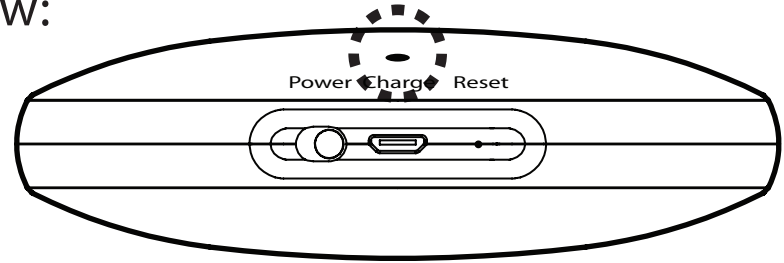


- **Charging the wireless shaker**

1. **AC/DC Adapter**
(not included)

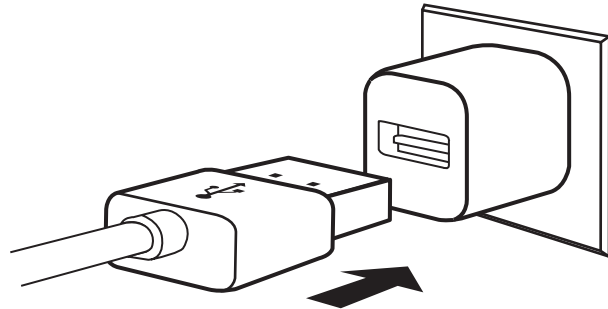

OR


2. **Built-in unit USB port**

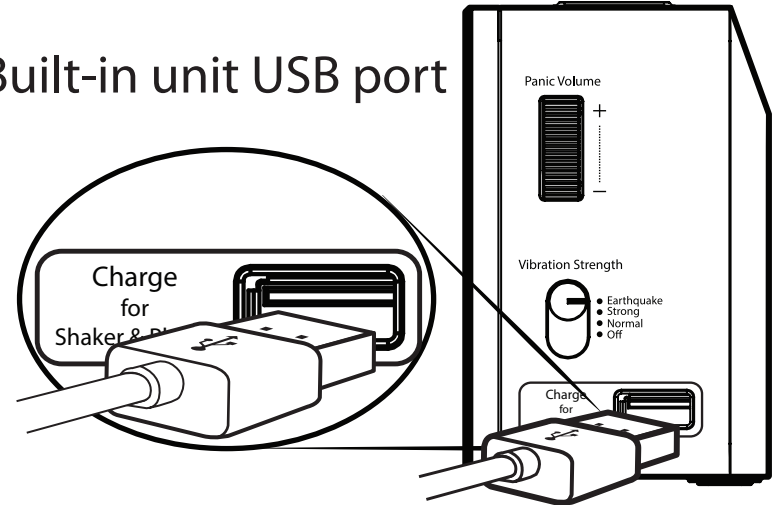

- To charge other devices such as a smartphone or tablet, connect the USB Charging cable to the **15** USB Charging port located on the right side of the device.

- The TimeShaker BOOM cannot access the content of the connected device.

- The USB Charging port is compatible to most smartphones, tablets, portable speakers, wireless headphones, wearables, etc.

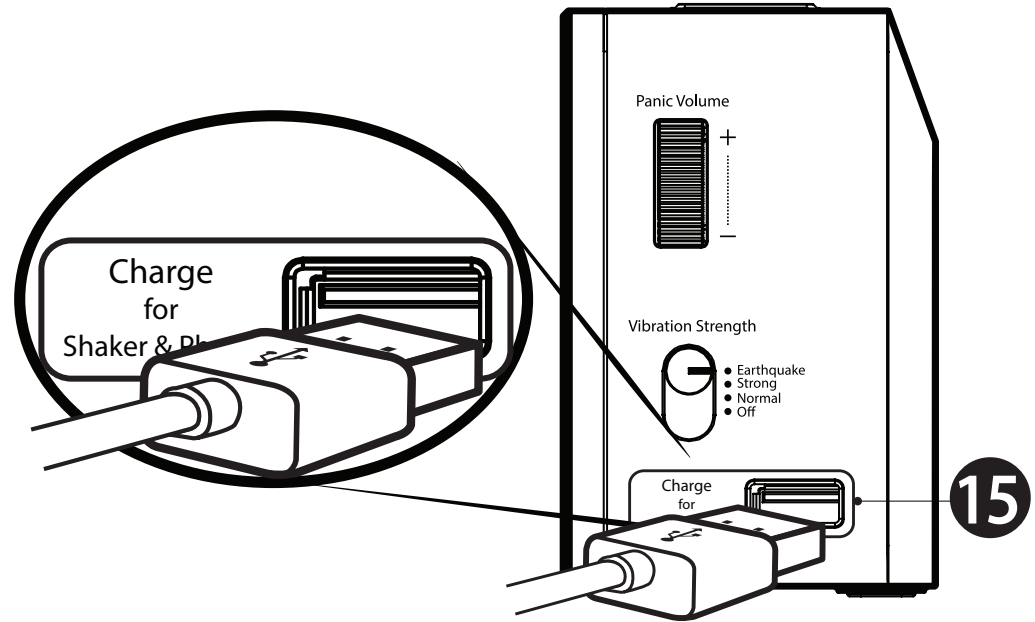


BACK-UP BATTERY WILL NOT OPERATE THE CLOCK

- The TimeShaker BOOM is equipped with a timekeeping system that can be powered with (2) AAA batteries (not included). The power failure protection circuit will not operate unless battery is installed.
- The back-up battery will save all previously programmed settings when normal household power is interrupted. The back-up battery will not operate the clock's normal functions.
- Normal operation will resume after the power is restored. You will not need to set-up the time/alarms if back-up battery is installed correctly.

The Back-up Battery is NOT a secondary source of power. The function acts as a memory saver for your settings in case of a disconnection of power. It is recommended to replace the battery at least once a year.

1. To remove the battery cover, **20** unscrew and slide the cover down
2. Install two (2) AAA Batteries (not included)
3. Place the battery cover back to its original position and fasten the screw

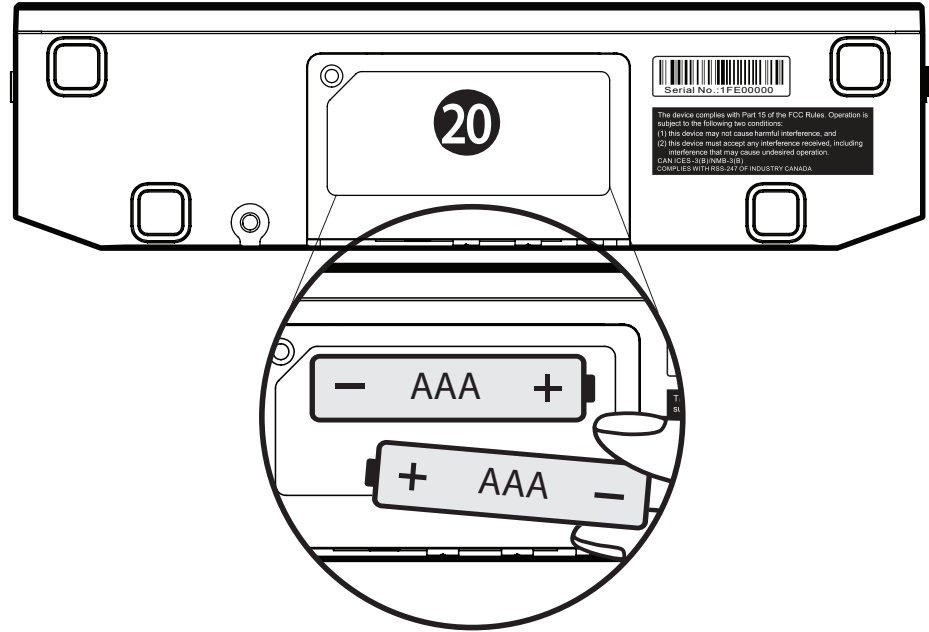


Q: How do I replace the backup batteries without losing your settings? (If old batteries are dead your setting will not be saved)

- A:**
- Remove the power cord and shaker cord.
 - Locate the backup battery compartment on the bottom of the unit and open it with a Philips screwdriver then remove the cover.
 - Plug the power cord in
 - Remove old batteries and insert 2 new "AAA" batteries.
 - Unplug the power cord.
 - Replace the cover. Do Not over tighten the screw.
 - Plug the power cord and shaker back in.
 - Check to confirm your settings are still saved.

Q: How do I re-sync the shaker in the case of a syncing issue?

- A:**
- Ensure all alarm/alert settings are set to off during the SYNC process.
 - On the Device, Press and HOLD the **4** "+" for 7 seconds to enter SYNC mode, If done correctly, the LED display will change into Sync mode
 - On the Wireless Shaker, while the device is in Sync mode, reset the Shaker by pressing the reset button with a small pin (not included), the Wireless Shaker will vibrate 3 times and the Light will flash blue to confirm that the device is synced
 - On the Device, press the **4** "+" button to exit Sync mode

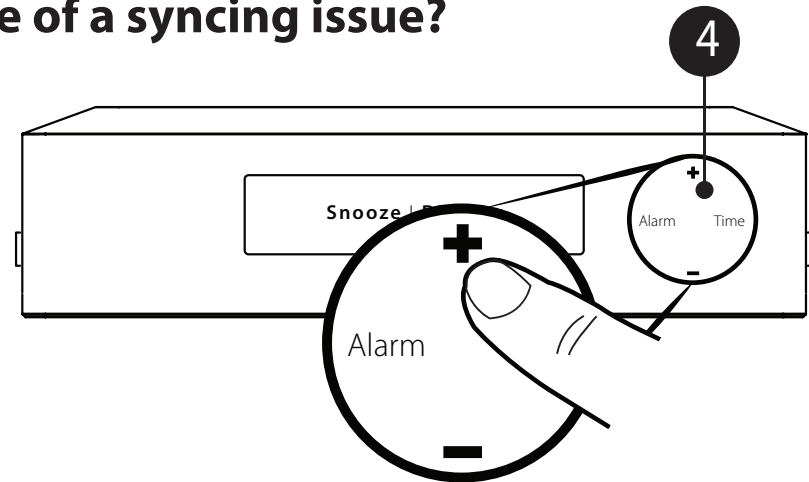

AC power adapter

Input: AC 100-240V, 50/60Hz, 0.35A
Output: DC 5V 2A

Backup Battery

AAA x 2

COMLIANCE WITH FCC REGULATION

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. / Increase the separation between the equipment and receiver. / Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. / Consult the dealer or an experienced radio/TV technician for help.

Caution! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hereby, iLuv Creative Technology declares that the radio equipment type TimeShaker™ BOOM is in compliance with Directive 2014/35/EU. The full text of the EU declaration of conformity is available at the following internet address: www.iluv.com

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

Thank you for purchasing your new iLuv product. We are fully committed providing our customers the utmost satisfaction through the use of our products. For warranty service, please visit us at www.support.iluv.com and submit a ticket with your date of purchase, product model number and a brief summary of your issue. In the event of any issues with your product(s), please review the troubleshooting section provided in the user manual. For further assistance, please contact us VIA customer service and speak to one of our representatives.

ONE YEAR LIMITED WARRANTY/GARANTÍA LIMITADA DE UN AÑO/GARANTIE LIMITÉE D'UN AN/EIN JAHR GARANTIE/ΠΕΡΙΟΡΙΣΜΕΝΗ ΕΓΓΥΗΣΗ ΕΝΟΣ ΕΤΟΥΣ
EUROPEAN UNION: TWO YEARS LIMITED WARRANTY/GARANTÍA LIMITADA DE DOS AÑOS/GARANTIE LIMITÉE DE DEUX ANS/ZWEI JAHRE GARANTIE/ΠΕΡΙΟΡΙΣΜΕΝΗ ΕΓΓΥΗΣΗ ΔΥΟ ΕΤΩΝ

Customer Service Contact

Online: Product Registration: www.iLuv.com -> "Product Registration" menu at the bottom / Customer Service: Support.iLuv.com

Email: support@iLuv.com

 
Phone: 1-866-807-5946 Mon-Fri: 8:30 AM - 5:30 PM EST

We take your privacy seriously.

Please visit <https://www.iluv.com/pages/security-privacy-policy> for more information about how we use personal information.

TSBOOMB00MUM01



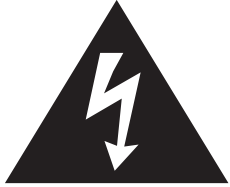

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. All the safety and operating instructions should be read before the product is operated
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. Use of controls or adjustments or performance other than those specified may result in hazardous radiation exposure.
6. Do not use this product near water or expose to rain to prevent fire or shock hazard. i.e. bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool, etc.
7. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
8. Unplug TimeShaker BOOM during lightning storms or when unused for long periods of time.
9. When main plug is connected, TimeShaker BOOM is readily operatable. In order to disconnect TimeShaker BOOM completely, the main plug should be disconnected from the main socket outlet.
10. Battery shall not be exposed to excessive heat such as sunshine or fire.
11. If battery is incorrectly replaced, it may cause explosion. Replace only with the same or equivalent type.